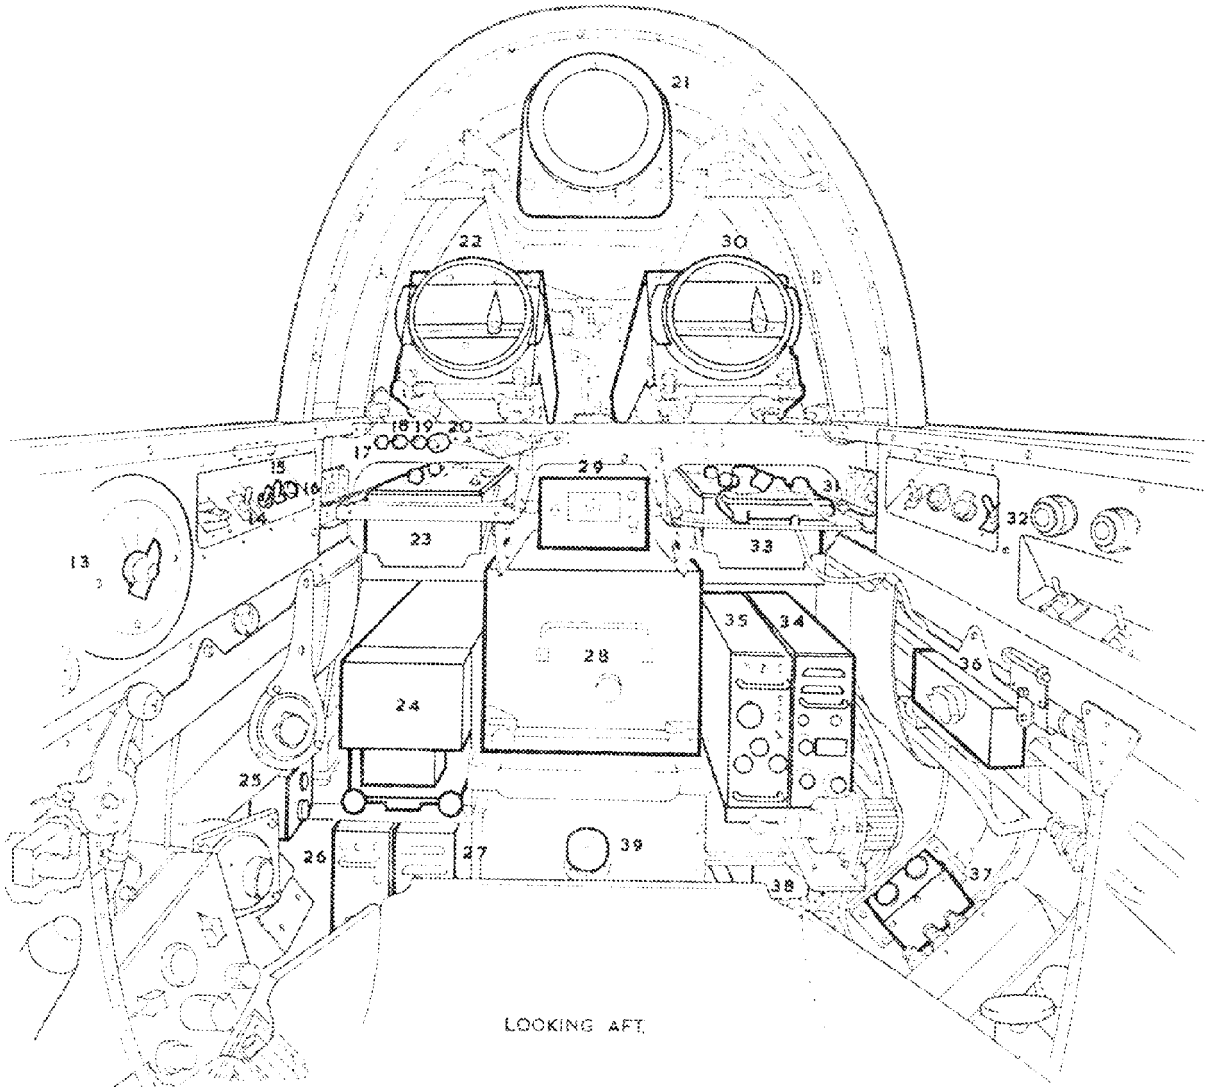

13 ROTARY SELECTOR SWITCH
Three positions:- V.H.F., H.F., or Sono I/C

14 SONOBUOY A/B SWITCH
Connects Headphones to, and lights the floodlamp of, the set selected. A (up) B (down)

15 H.F. TAKE CONTROL SWITCH
Change over to take control from centre Cockpit

16 MAGNETIC INDICATOR
Will show white when aircrewman has H.F. control

17 PRESS TO TRANSMIT SWITCH
Intercommunication

18 TALK TO OBSERVER SWITCH
Intercommunication

19 LISTEN TO PILOT SWITCH
Intercommunication

20 TALK TO PILOT SWITCH
Intercommunication

21 C.R.T. INDICATOR
Type 101 (A.R.I. 5838)

22 SONOBUOY INDICATOR
Type 1 or 7301, set A (A.R.I. 5487)

23 CONTROL UNIT
Type 704, set A (A.R.I. 5487)

24 RECEIVER
Type R 7303 (A.R.I. 18032)

25 JUNCTION AND TEST BOX
Type 151, Set A (A.R.I. 5487)

26 POWER UNIT
Type 759, Set A (A.R.I. 5487)

27 RECEIVER
Type 1933, Set A (A.R.I. 5487)

28 TRANSMITTER
Type T 7304 (A.R.I. 18032)

29 CONTROL UNIT
Type 928 (A.R.I. 5838)

30 SONOBUOY INDICATOR
Type 1 or 7301, set B (A.R.I. 5487)

31 H.F. MORSE KEY

32 POWER SWITCH
Intercommunication, ON (up)

33 CONTROL UNIT
Type 704, set B (A.R.I. 5487)

34 RECEIVER
Type 1933, Set B (A.R.I. 5487)

35 POWER UNIT
Type 759, Set B (A.R.I. 5487)

36 SWITCH UNIT
Type 515 (A.R.I. 5838)

37 JUNCTION AND TEST BOX
Type 151, Set B (A.R.I. 5487)

38 AMPLIFIER AND CALIBRATION UNIT
A.R.I. 5487

39 V.H.F. MUTE SWITCH
Intercommunication